


## What's in the Box


Package includes a cradle base, a cradle top, two cradle feet, two short hand screws, and two long hand screws.

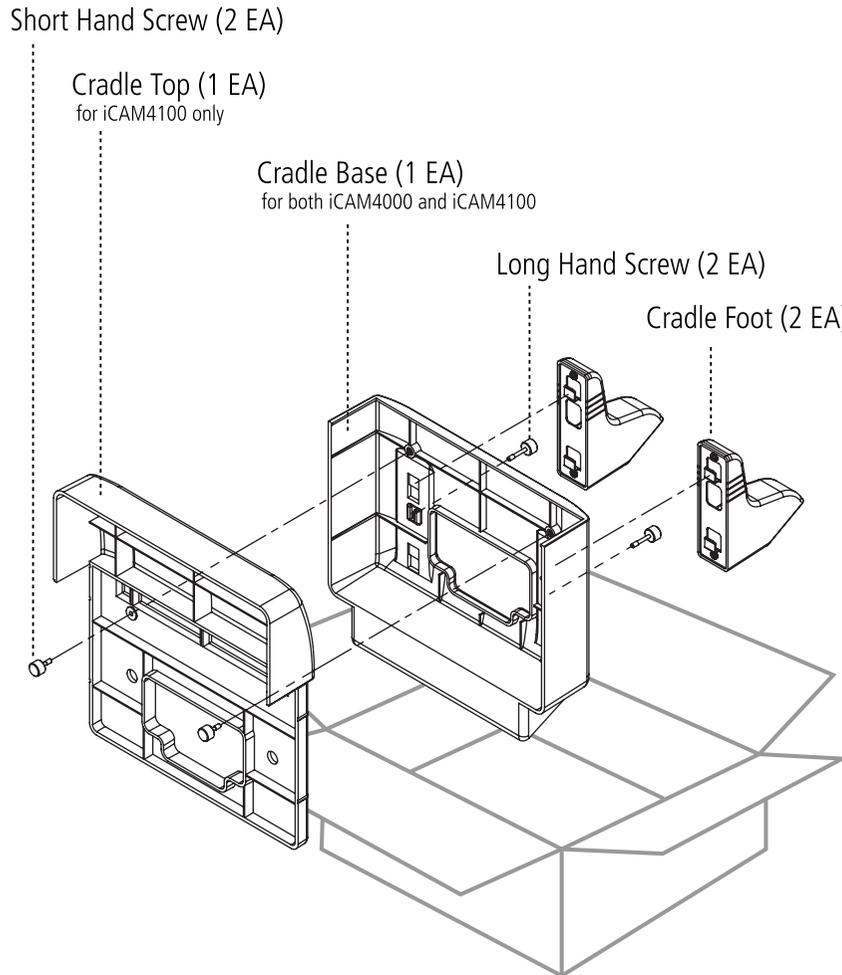

IRISA ID

**IrisAccess™**  
Advanced Identity Authentication

# iCAM Cradle Quick Start Guide

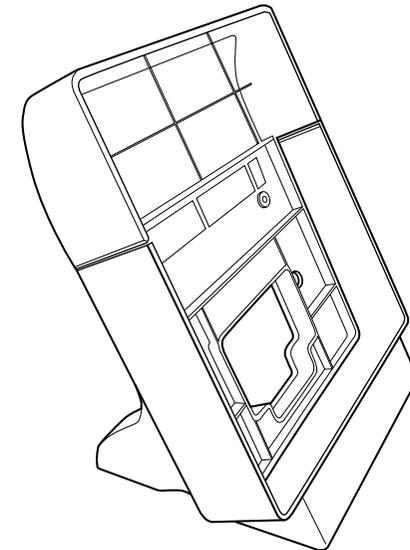

COPYRIGHT © 2006 IRISAID INC, ALL RIGHTS RESERVED.

iCAM Cradle for LG IrisAccess™ Quick Start Guide

The content of this document is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by Irisa ID Incorporated. Irisa ID Incorporated assumes no responsibility or liability for any errors or inaccuracies that may appear in the informational content contained in this document.


Please remember that existing images or drawings that you may want to include in your document may be protected under copyright law. The unauthorized incorporation of such material into your work could be a violation of the rights of the copyright owner. Please be sure to obtain any permission required from the copyright owner.

LG Iris, LG Iris logo and IrisAccess are used with permission of LG Electronics USA Incorporated.



Manufactured exclusively for LG IrisAccess™ products.

Irisa ID Incorporated, 1501 Daerung Post Tower 1st, Guro-gu, Guro-dong, Seoul, 152-058, Korea


## Installation for iCAM4000

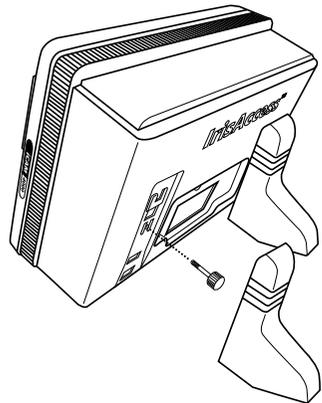

- 1** Before assembling cradle, connect all iCAM wiring (see iCAM Hardware Manual).
- 2** Make sure wires are passed through the back of the cradle base.
- 3** Place iCAM into cradle, and secure in place with two short hand screws from the back side, making sure to position so that cradle depresses tamper switch.
- 4** Affix feet to cradle aligning from bottom, then sliding up into place.

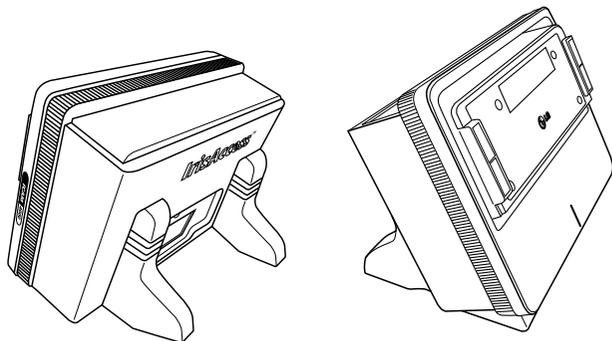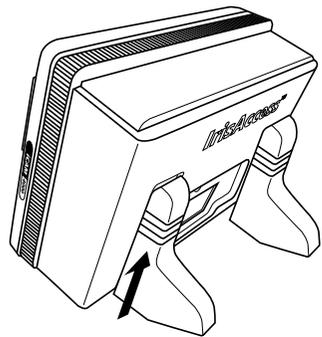

## Installation for iCAM4100

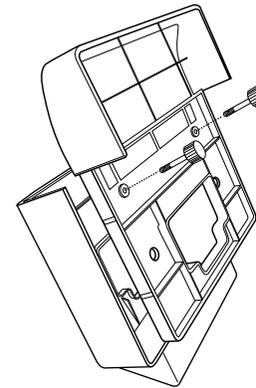

- 1** Before assembling cradle, connect all iCAM wiring (see iCAM Hardware Manual).
- 2** Use two short hand screws to secure cradle top to cradle base (from inside front to back).
- 3** Make sure wires are passed through the back of the cradle base.
- 4** Place iCAM into cradle, and secure in place with two long hand screws from the back side, making sure to position so that cradle depresses tamper switch.
- 5** Affix feet to cradle aligning from bottom, then sliding up into place.

